



Waterless Composting Toilet

MANUAL



- **Made for a Mobile Life**
- **Real toilet Comfort**
- **Durable Quality**
- **Easy to Install & Use**
- **No more Dump Points needed**
- **The environment is pleased**





Thanks for choosing OGO™
GO OFF GRID

Dear Valued Customer

We want to say thank you and congratulations on your new off grid sanitary solution.

OGO™ is committed to quality and customer service. We are on the journey to provide solution based products that are innovative and modern.

Products that work with any lifestyle and space, making off grid living an easy transition.

Each unit is 100% inspected before leaving our facility to ensure you are receiving the highest quality!

This unit's quality control specialist was:



What's in the Box?	3
Tech Specs	4
Warranty	4
Safety	5
Installation	6
Power	6
Venting	7
Compost Medium	7
How to Use	8
Urination	8
Solids Use	9
Cleaning	9
Urine Disposal	10
Solids Disposal	11

What's in the box?



We try to make it easy to get you started...

- The OGO™ Toilet
- Mounting Screws
- 1.5M Venting Hose
- 12V Cable
- Spray Bottle of Compost Toilet Cleaner/Stimulator
- Coir Peat Brick
- Urine Bottle Cap



ogotoilet.com.au | 1800707076 | info@enviropo.com.au


WARRANTY

We offer a **Five(5)** year manufacturing and materials warranty and a **One(1)** year electrical warranty for this product. These warranties do not apply to incorrect use or if the customer has damaged or altered the product in some way. If you have any questions regarding spare parts or warranty, please contact us at info@enviropo.com.au

TECH SPECS

Each unit weighs **12.7 Kg**

- Max weight limit **226.79Kg**
- Solids bin has a capacity of 25-30 uses before change
- Urine bottle holds just over 9 Litres of liquid

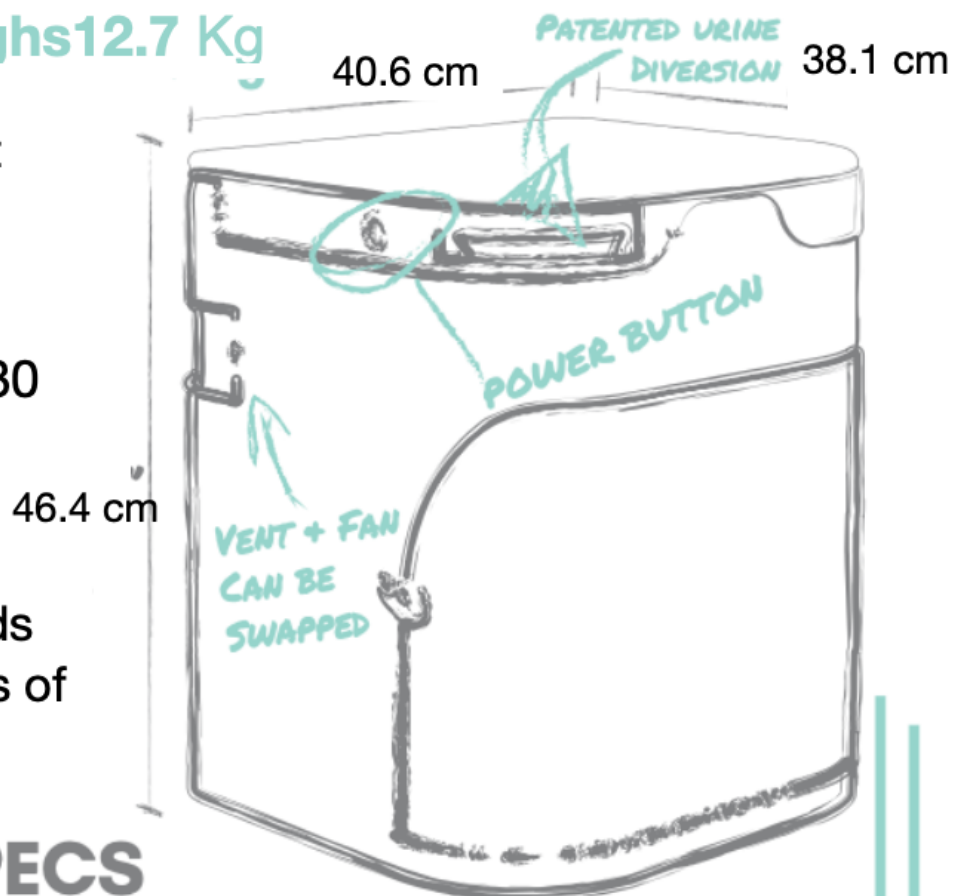

POWER SPECS

OFF GRID

We recommend a deep cell battery with a 12V capacity.

WIRED ELECTRIC

Power adapter needed plug into 240V outlet

Fan Power

- Always on
- 20 mA rating
- 0.48 Ah/day

Motor Power

- On when mixing
- 45 sec. cycle time
- 5 Amp rating
- 1.8 Amp Average Draw



ogotoilet.com.au | 1800707076 | info@enviropo.com.au



IMPORTANT SAFETY INFO

PLEASE READ ALL SAFETY INSTRUCTIONS CAREFULLY BEFORE USE.

THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY PERSONAL INJURY OR OTHER DAMAGES OCCURRING AS A RESULT OF FAULTY INSTALLATION OR IMPROPER USE. PLEASE SAVE THIS MANUAL FOR YOUR REFERENCE

WARNING!

Do not use this product if it has been damaged or is not working properly

GENERAL PRECAUTIONS



AVOID ELECTRIC ISSUES

Never use a damaged power cord or plug. Never run power cord over hot surfaces or sharp edges. Ensure power cable and connections are correct before operating. Consult manufacturer or professional for questions regarding electrical concerns, comments, or questions.

REGULAR MAINTENANCE


Regular maintenance and cleaning are critical to ensure your OGO™ is working properly. For a full list of procedures visit ogotoilet.com.au



ogotoilet.com.au | 1800707076 | info@enviropo.com.au

INSTALLATION


Place the provided x4 (#14 - 3/4") stainless steel screws into mounting holes and use a screwdriver or drill to tighten the base of the toilet to the floor. Drain holes can be removed to install drain kits.

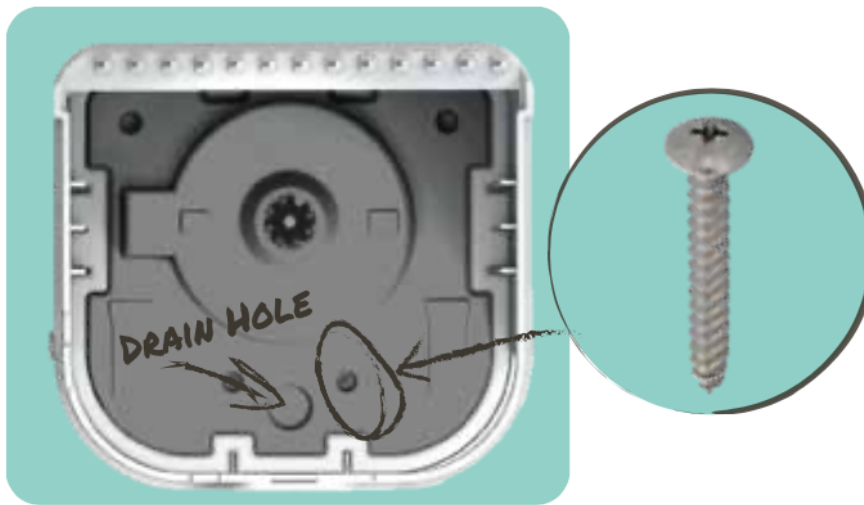

POWER

If you have access to 240V plug one end of the power adapter (sold separately) into a wall outlet, and the other end into the small power jack (5.5 x 2.5 mm jack) on the back of the toilet.

If you have access to 12V, connect the positive (RED) wire of the power cable to the positive terminal of the battery. Repeat with negative wire (BLACK) and terminal connection. Plug power jack into unit.

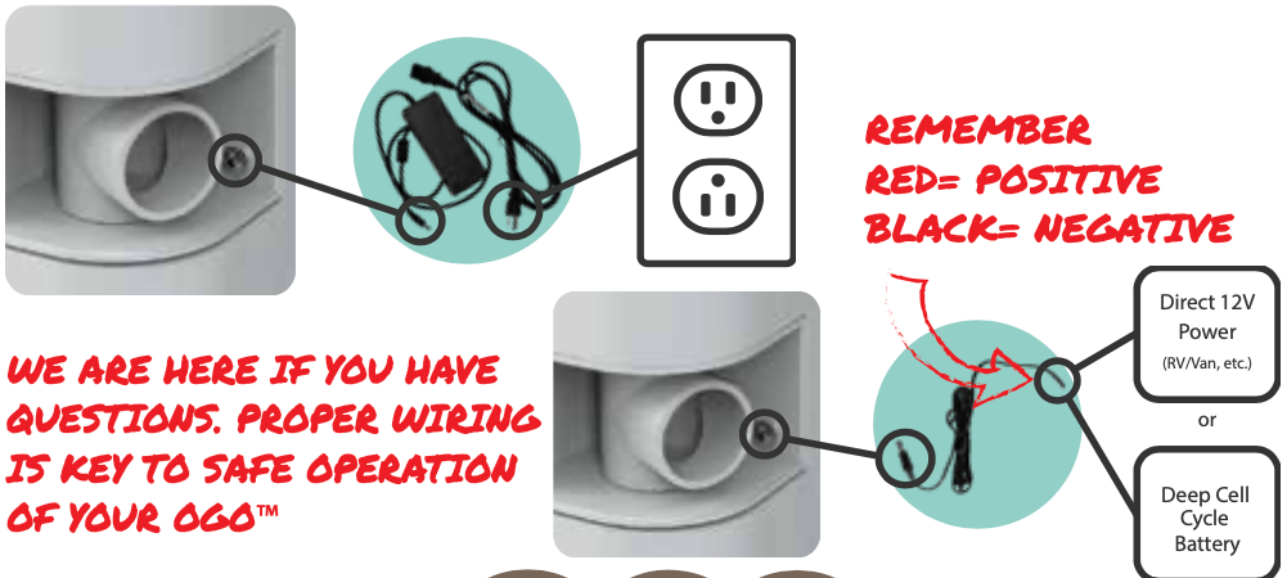

ogotoilet.com.au | 1800707076 | info@enviropo.com.au


VENTING

Proper ventilation can help odour control.

The inserts for the venting/power and inlet filter can be swapped depending on which direction your power source/venting capabilities are coming from. Using a small flat screw driver, pop out the insert from the inside of the toilet, and pop them back in on the desired side.

VENTING HOSE

Your OGO™ comes with a 1.5 m vent hose that has black adapters on each end. These hose ends fit a 40mm PVC pipe. Place one end of the nose on the T-bar that's on the back of the toilet. The other end will attach to your exterior venting capabilities.

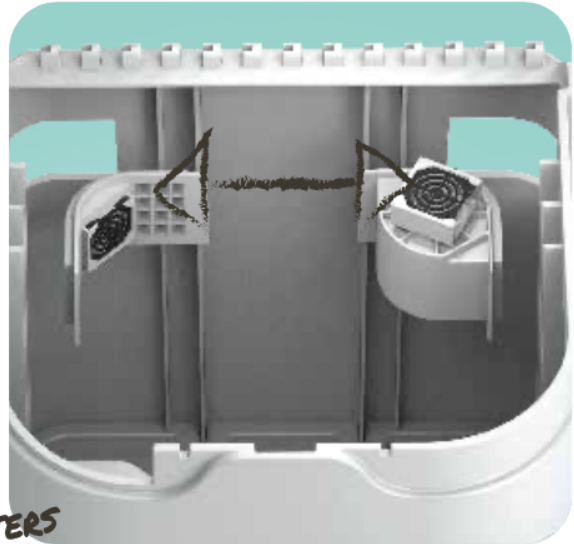

PRO TIP:
CHARCOAL FILTERS
ARE A GREAT WAY
FOR EXTRA FILTRATION

COMPOST MEDIUM

We highly recommend COIR-PEAT as our preferred compost medium in our solids bin.

Please do not use wood chips/sawdust/soil/animal bedding in your unit. These mediums will become clay like, causing issues to your motor. Your solids bin composting medium needs to be the correct balance of moisture and consistency to effectively operate your unit.

We like to make things simple and that is why we provide a sample brick(9L) with your new unit. 2/3 of a brick mixed with 1.5 litres of warm water will have you on your way.



ogotoilet.com.au | 1800707076 | info@enviropo.com.au

HOW TO USE YOUR OGO™

FILLING SOLIDS BIN

Now let's get to the everyday use of your unit. First step is getting your solids bin set up correctly. Pick your compost medium and fill to the appropriate level. This is critical for your unit to work properly. Fill bin to slightly below the proper fill line with your medium of choice. Add water until it is wet to touch and allow the agitator to fluff the medium until it meets the proper fill line.

PLACE BIN SO STIR ROD MOUNTING BOLTS ARE FACING THE FRONT



URINATION

Our patented trap door allows OGO™ to divert urine from solid waste, reducing unfavorable odors. The urine funnels to the bottle below. It is suggested men sit while using the toilet. Even if some urine gets into the trap door area, it will still properly funnel into the bottle below. After each use we suggest spraying the bowl to keep your unit clean.



ogotoilet.com.au | 1800707076 | info@enviropo.com.au

SOLIDS

Start by opening the trap door. Pull handle STRAIGHT FORWARD away from unit. When finished close the trap door with the same motion, ensuring it is closed completely. Push the power button. The power agitator will be active for 45 seconds, mixing the solids with the compost medium. Average capacity is 25-30 uses before needing emptying.

Toilet paper works well with proper medium consistency and moisture. We recommend using single ply and/or biodegradable toilet papers. Ensure toilet paper does not gather and collect into large clumps allowing the agitator to move freely.

OPEN



CLOSE



PUSH



PRO TIP:
Using the Compost Cleaner/
Stimulant will clean
deodorise and stimulate
your compost

CLEANING

As with any sanitation solution, OGO™ needs regular cleaning to ensure proper user hygiene. We suggest spaying with our Compost Toilet Cleaner/Stimulant before and after use. Everyone is different in frequency, usage, and bathroom etiquette. Adopting some common best practices helps keep your unit running like new.



ogotoilet.com.au | 1800707076 | info@enviropo.com.au

DISPOSAL

URINE DISPOSAL

To access the urine bottle of your OGO™, lift the bowl slightly. Place provided cap on bottle. Rotate the drawer latches and pull drawer out. Grab by handle and lift up out of the drawer. **IMPORTANT!** Always consult your local environmental office to find out what regulations apply in your municipality. Always follow your local guidelines and laws for properly disposing of waste.



ogotoilet.com.au | 1800707076 | info@enviropo.com.au

SOLIDS DISPOSAL

To access the solids bin of your OGO™ lift the bowl slightly and remove the drawer. Pull bin from top or tilt and pull from front. Place solid mixture into a compost friendly bag or directly into your compost pile. Full compost cycle will take 6 to 12 months. Always consult your local environmental office to find out what regulations apply in your municipality. Always follow your local guidelines and laws for properly disposing of waste.



GO OFF GRID!!



ogotoilet.com.au | 1800707076 | info@enviropo.com.au



ogotoilet.com.au | 1800707076 | info@enviropro.com.au

Distributed in Australia by:
EnviroPro Alternatives Pty Ltd
137 Lake Russell Dr,
Emerald Beach. NSW 2456

Manufactured by
sales@ogotoilet.com
567-271-2020
240 Stanford Pkwy
Findlay, OH 45840

